

Installation manual for Land rover Velar 2018 Power Tailgate

— . Procedure instructions for removing the trim plate



1. Open the rear door and remove the original rear door decoration plate.



2. Take out the cover plate as shown.



3. Remove the tail door lock hook trim.

二. Procedure instructions for installing brackets and poles



1.Remove the left and right poles of the original car.



2.Install our left and right electric poles, do not need to change the original car bracket.



3.Install our electric pole, Hall signal line go through the reserved hole of the original car.

≡. Instructions for installing electric suction locks



1.Remove the original rear door lock hook.



2.Install our company's electric suction pull lock. The position of the electric suction pull lock can be adjusted when the door gap is too large or cannot be closed.



3.The electric locking machine is fixed on the right side of the spare tire as shown in the figure.

四. Procedure Instructions for collecting cables



1. Unplug the original car lock control cable and connect it with our standard lock adapter cable.



2. As shown in the figure, the power cord and suction lock wire are routed along the original car harness to the right side of the rear compartment.



3. Disassemble the trim panel on the right side of the trunk, find the safety position of the original car, unplug the 30A normal electric insurance of the original car, insert it into the electrical outlet of our company, and insert it into the safety hole of the original car to obtain electricity.

五. Procedure Instructions for installing ECU control box



1. Fix the control box on the tailgate as shown in the figure and connect all wiring harnesses properly.

六. Procedure Instructions for installing buttons



1. Control the front with the original tailgate button on the left side of the steering wheel.



2. Install the tailgate button on the right side of the tailgate trim panel as shown in the figure.

七. Instructions for Electric tailgate controls

original car	key	Press the tailgate button once
	Hand button	single press
	front button of the driver's seat	Long press for 1.2 seconds
	Unlock button of driving position (need to connect the signal cable of central control lock)	/
after installation	tailgate button	single press
	front button of the driver's seat	/
	Kick sensor (optional)	Lift the foot in the induction zone for 1 second
	Voice-activated induction (optional)	Private password wake up