

344-1926FXAS&444-1988FX-SR/S

(BM 4 SERIES 18 車型)安裝說明書

BM 4 SERIES 18 Installation Instruction

1. 確認 344-1926FXAS&444-1988FX-SR/S 配件是否如圖示(圖.1&2&3)。


1. Make sure the components of 344-1926FXAS & 444-1988FX-SR/S are the same as the pictures shown. (Fig.1&2&3)



(Fig.1)



(Fig.2)

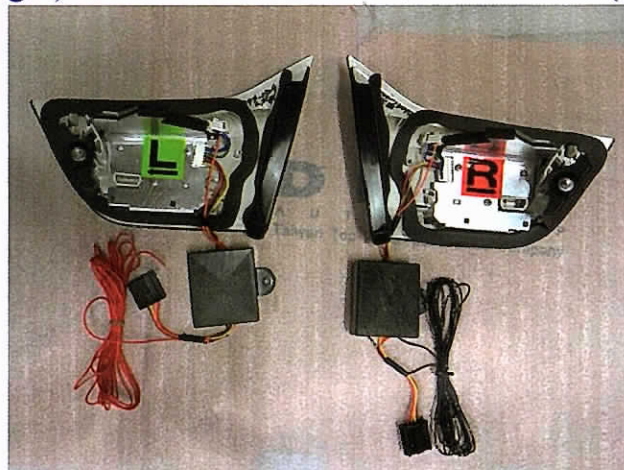

(Fig.3)

2. 拆下原廠燈件並安裝 344-1926FXAS&444-1988FX-SR/S 並安裝組抗盒(圖.4&5)

2. Remove the original part and install the 344-1926FXAS, 444-1988FX-SR/S and the resistance box. (Fig.4&5)



(Fig.4)




(Fig.5)

建議阻抗盒放置區
Resistance box

3. 開啟後行李箱，拆下原廠護板與右側裝飾絨布(圖.6&7)

3. Open the trunk, and remove the original panel & interior fabric. (Fig.6&7)

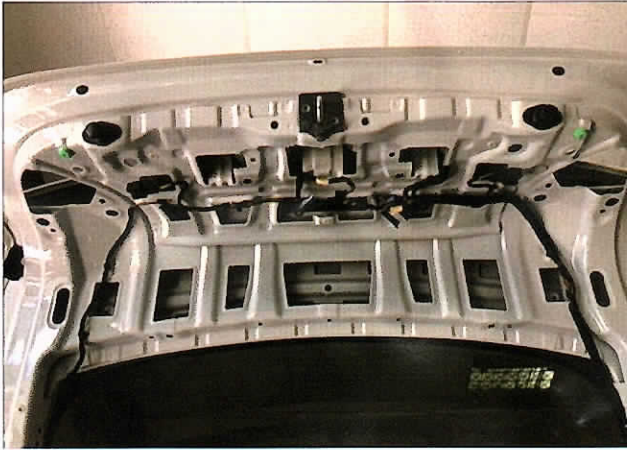

(Fig.6)




(Fig.7)


拆卸右側裝飾絨布
Remove the interior fabric

4. 檢視右側車體電束總成(圖.8)並找出“黑白線色”(LH 接線用)(圖.9) 與“黑灰線色”(RH 接線用)(圖.10)


4. Check the harness of the right car body (Fig.8) and find the "black and white" wire (for LH wiring) (Fig.9) and "black and grey" wire (for RH wiring)(Fig.10)

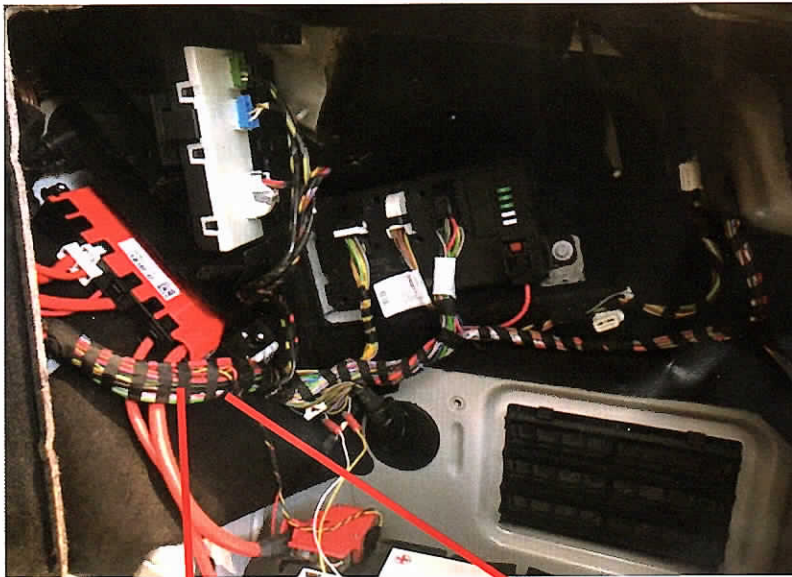

(Fig.8)

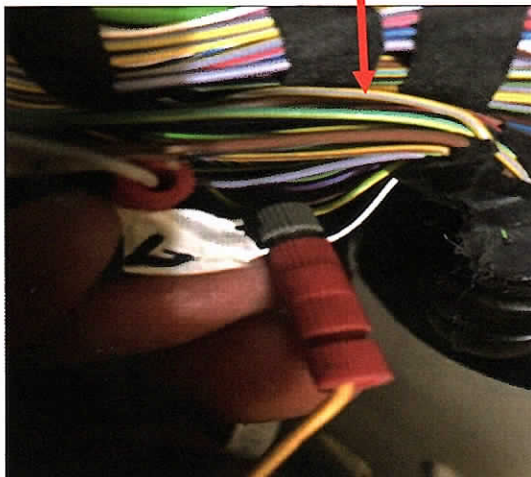

(Fig.9)

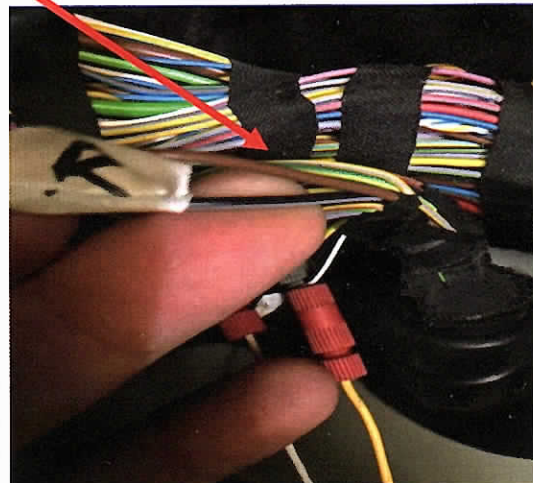


(Fig.10)

利用紅接線夾將車體端“黑白線色”電線與 LH 之紅線色電線搭接(圖.11)。

5. Connect the vehicle "black and white" wires with the red wires of the LH using the red wire clip. (Fig.11)

6. 利用紅接線夾將車體端“黑灰線色”電線與 RH 之黑線色電線搭接(圖.11)。

6. Connect the vehicle "black and grey" wires with the black wires of the RH using the black wire clip. (Fig.11)

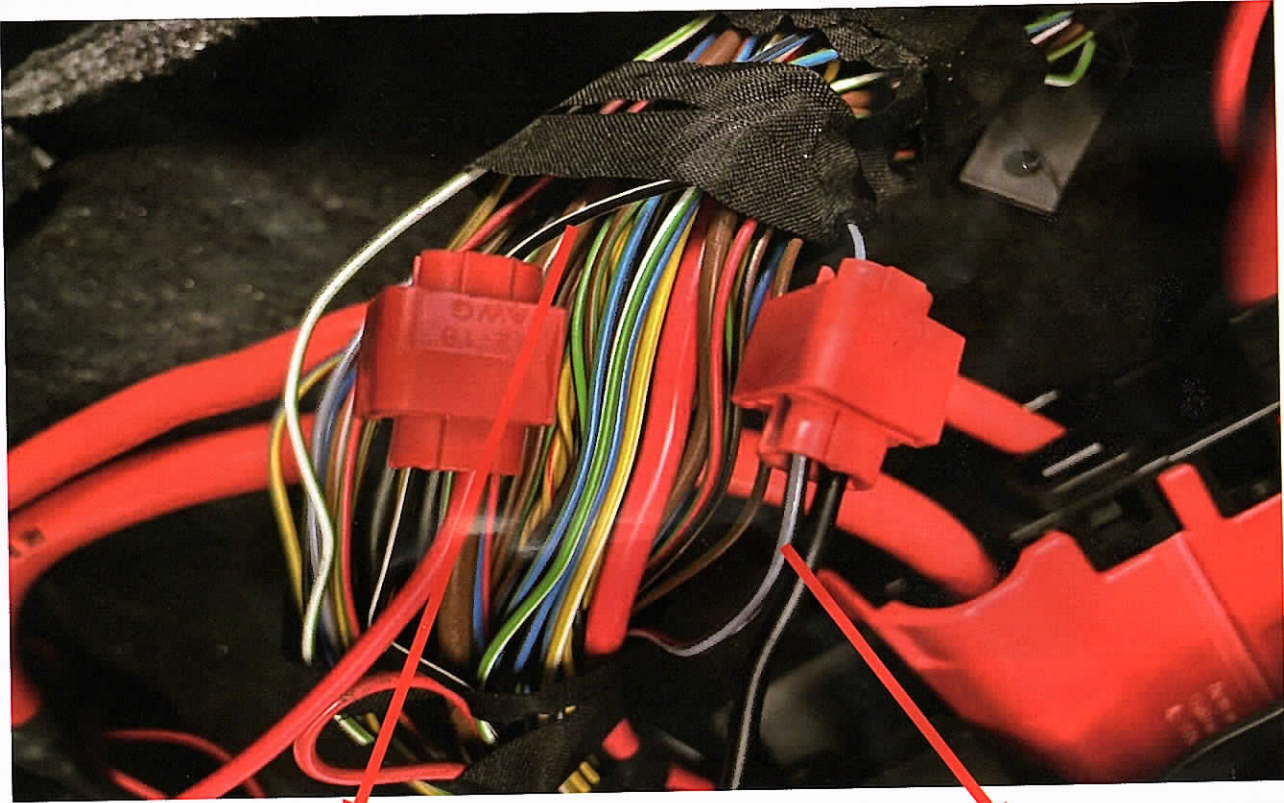

黑白線色
"Black and white"

(Fig.11)

黑灰線色
"Black and grey"

7. 啟動電源並發動引擎確認點燈作動功能是否正常(圖.12&13)。

7. Start the Engine and make sure the all the lighting equipment are functioning normally. (Fig.12&13)。




(Fig.12)



(Fig.13)

8.將所附線束按照原車線束安裝至行李箱右下車體線束並用束帶固定(圖.14)


8. Install the attached wiring harness to the lower right vehicle harness in the trunk according to the original car harness and tighten with a tie zip. (Fig.14)

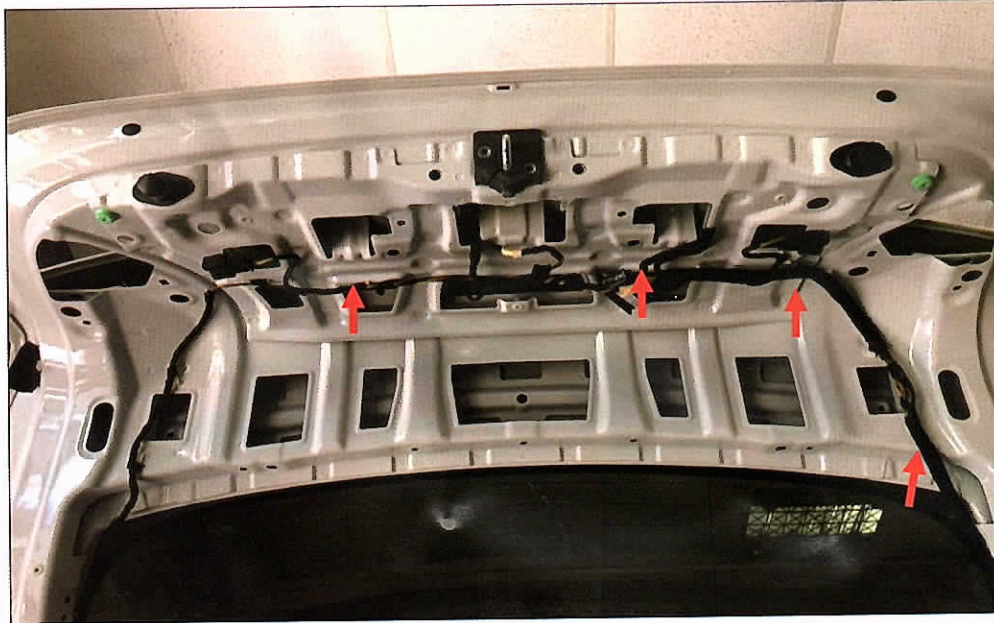

(Fig.14)

9.將拆卸之護蓋與右側裝飾絨布裝回

9. Replace the trunk panel & interior fabric.

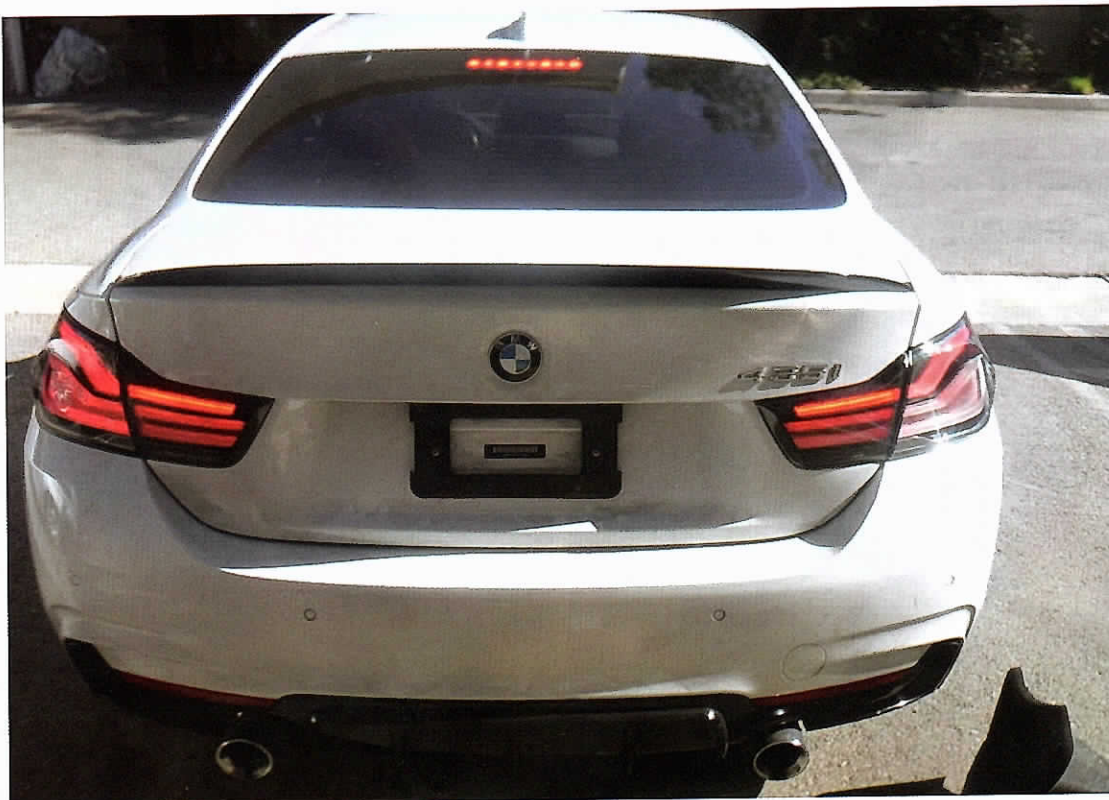

(Fig.15)

10.發動引擎確認點燈外觀並測試所有功能即可完成安裝(圖.15)

10. Start the engine and make sure all function is correct. (Fig.15)