

## Running Boards Side steps suitable for BMW X6 E71 E72 (2008-2014)

Code RBBM01

---



To facilitate your installation, please read the product instruction manual carefully before installation.



Running Boards Side steps suitable for BMW X6 E71 E72 (2008-2014)


Code RBBM01

---




**Step 1:** Remove the original side skirts of the car (please keep the nuts and buckles to fix the new boards).

**Step 2:** Install our inner brackets on the car and tighten it with M6 nuts and pads.

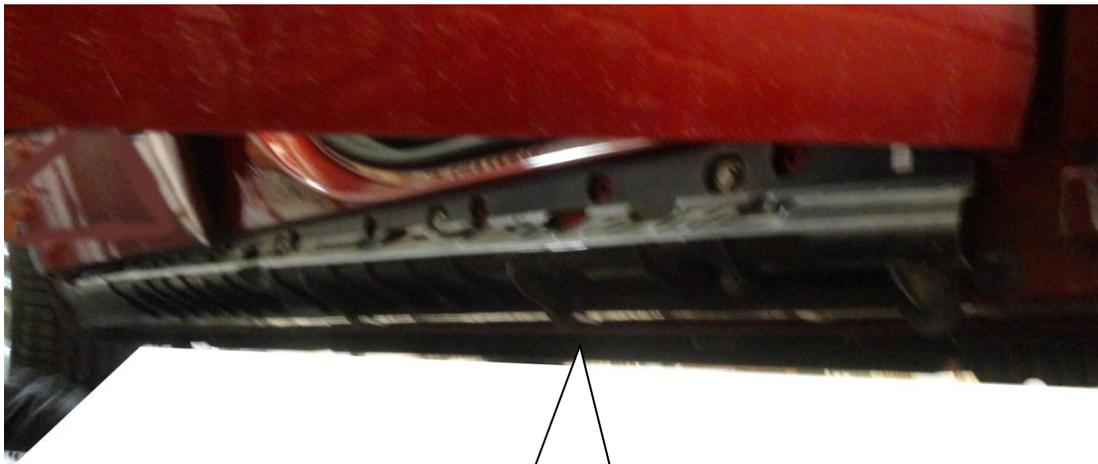


Fix the bracket of the running boards on the car

**Step 3:** Fix the bracket with screws

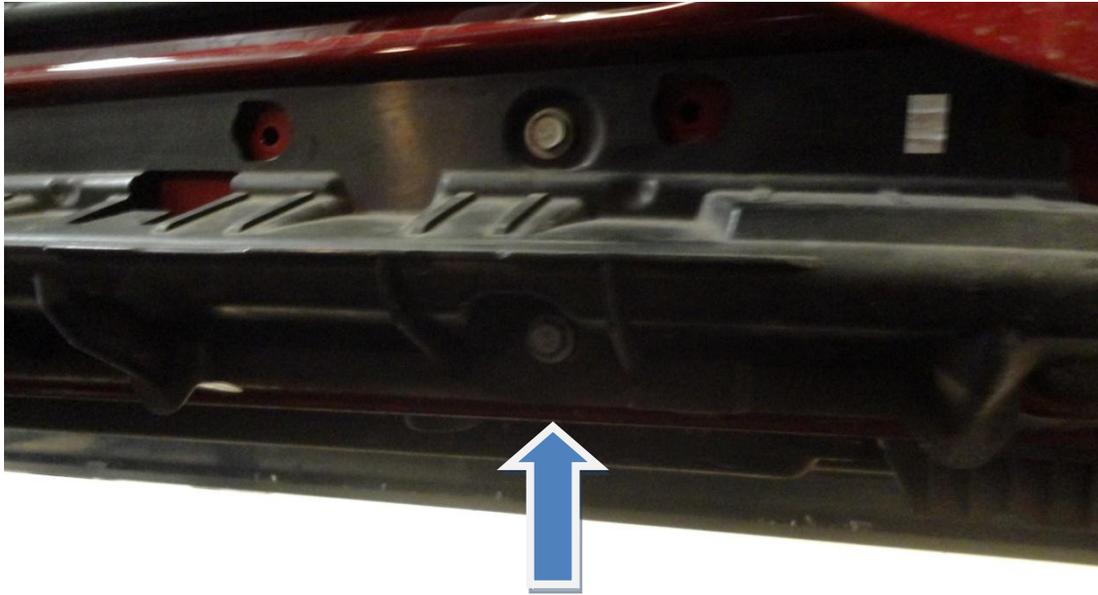

**Step 4:** Install the clips on the pointed position

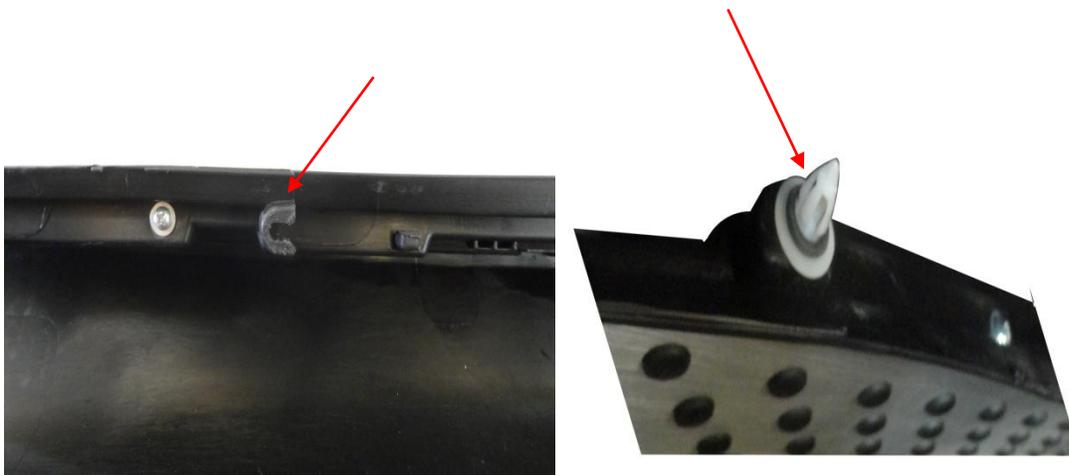

**Step 5:** Check whether all screws are tightened and pack the tools.

## Running Boards Side steps suitable for BMW X6 E71 E72 (2008-2014)

Code RBBM01

---

**Step 6:** Finally fix the outer board on the bracket correctly and then firmly push the clips into the bracket until it locks in place.

**Step 7:** Repeat on the other side

Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.

