


Installation Manual

Product Name: Side Steps for Benz ML350 2012+

Note: Please carefully read this assembly instruction before you start installation. Pay attention to your car to avoid surface scratch.

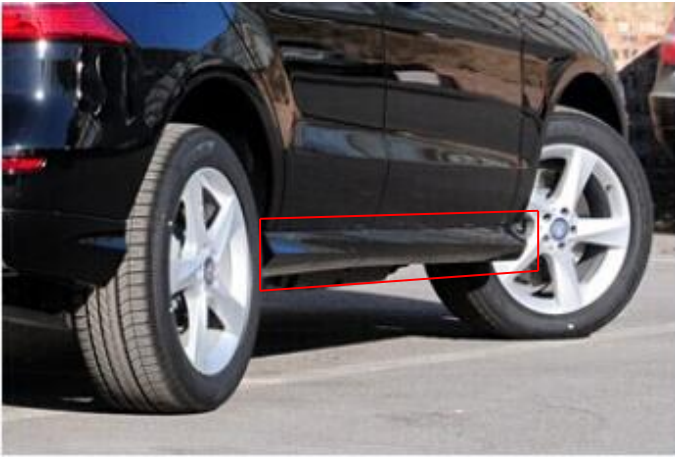

1. REMOVE SIDE SKIRT AND LINING FROM ORIGINAL.



2. FIT SIDE STEPS SUPPORT TO CAR BODY THEN TIGHTEN ALL SCREWS AND NUTS.



3. ADJUST SIDE STEPS SUPPORT TO MAKE IT ALIGN WITH CAR BODY, AND TIGHTEN ALL SCREWS.



4. PUT SIDE STEPS ON, AND PUSH IT TO MAKE IT TIGHTLY WITH THE BODY, THEN INSERT EXPANSION



5. INSTALLATION FINISHED, CHECK CAREFULLY IF THE RUNNING BOARD APRESS THE BODY, IF NOT, PLEASE MAKE SURE ALL PARTS ARE INSTALLED CORRECTLY.