
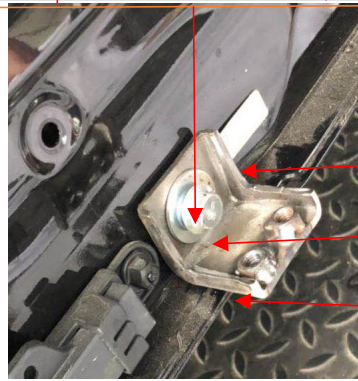


# BMW X3 G01 Running Boards(Side Step) Installation Instruction

- 1: Take off the original side skirts (3 clips on front and rear fender(take off the laser lights if available))
- 2: Find the 1,2,3,4 holes on the below photo, put the compression nut in and fix the brackets to the holes, make sure the down side of the brackets hit the down beam of the car.

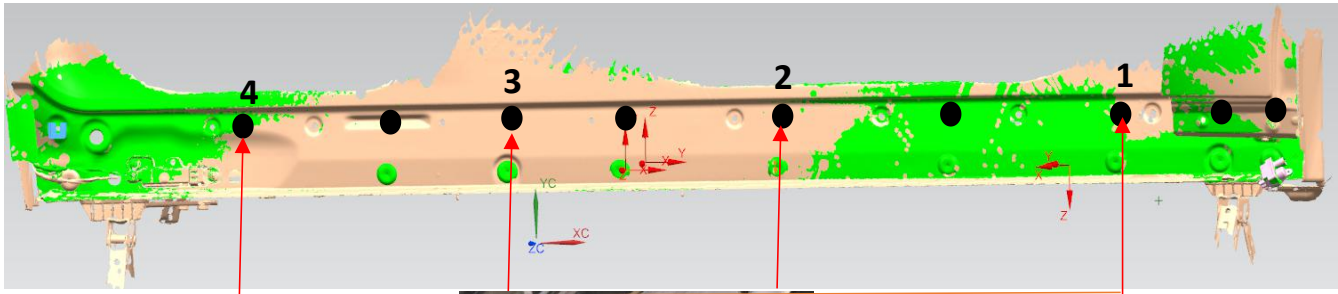

- compression nut
- hexagonal flange screw M10X25
- bracket

- 3: Put the clips on the side step and fix the board to car(fix the lasers lights(if available) to the boards and then fix the boards to the side step)




side step



boards for laser lights

- 4: Fix the bigger brackets on ( as photo below), the rear bigger bracket fix on hole 4, front brackets fix on holes 1、 2、 3.

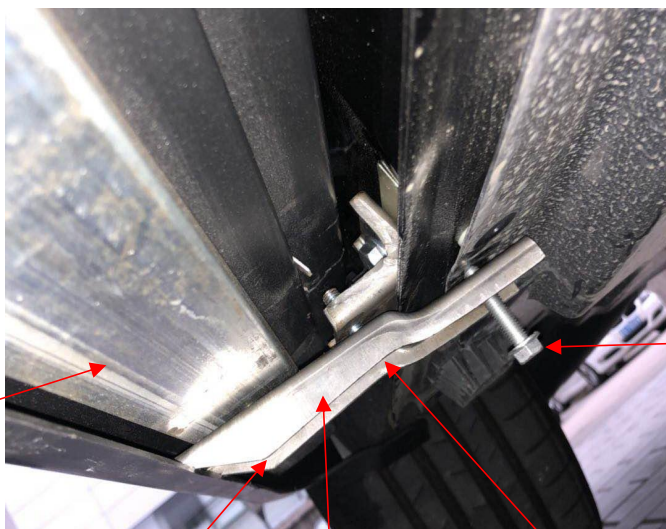

side step

nut M8

bigger bracket

hexagonal flange screw M8X25

rear bracket fix on hole 3,4



front bracket fix on hole 1、 2