Code MDSPK63CW213

Installation Instructions

To facilitate your installation, please read the product instruction manual carefully before installation.

Components:





Code MDSPK63CW213

1. Remove the two T30 screws at the arrow point and remove the door panel.




2. Use two long flat blade screwdrivers to pry up and down to remove the small wooden frame.



Code MDSPK63CW213

3. Use diagonal pliers to remove the hot melt adhesive welding points that fix the speaker cover from the vehicle.

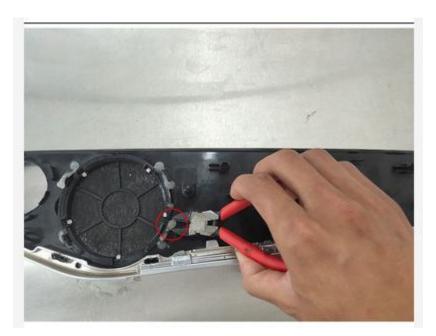

4. Use a flat head screwdriver to pry up the original car speaker cover.



Code MDSPK63CW213

5. Install our speaker cover and fix it with hot melt glue in the same way.



Code MDSPK63CW213

6. The speaker cover adapter plug is adapted to the original vehicle No.6 plug.



Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.