
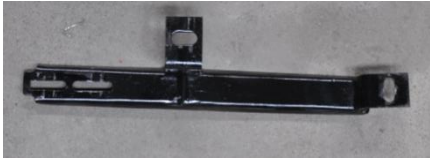









INSTALLATION INSTRUCTIONS FOR AUDI Q3/Q5/Q7 RUNNING BOARDS



INSTALLATION KIT

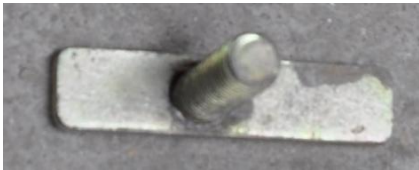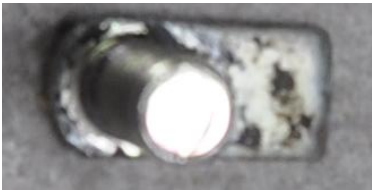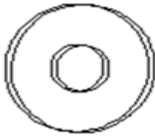N o.	Q TY	PHOTO	N o.	Q TY	PHOTO
1	2	RUNNING BOARDS	2	2	 <p>FRONT-LEFT BRACKET</p>


3	2		4	2	
		MID-LEFT BRACKET			REAR-LEFT BRACKET
5	4		6	4	
		NO.1 BRACKET			NO.2 BRACKET
9	4		10	12	
		NO.3 BRACKET			M10 Spring joint-packing
13	12		14	12	
		M10 NUT			M10 Spring joint-packing


1. Installation Prepare (left and right size use the same way to do)

A: Check all the installation kits

B: Take off the skid plate of the car bottom


C: Find out the fixing position showed on below illustration

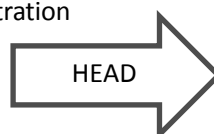

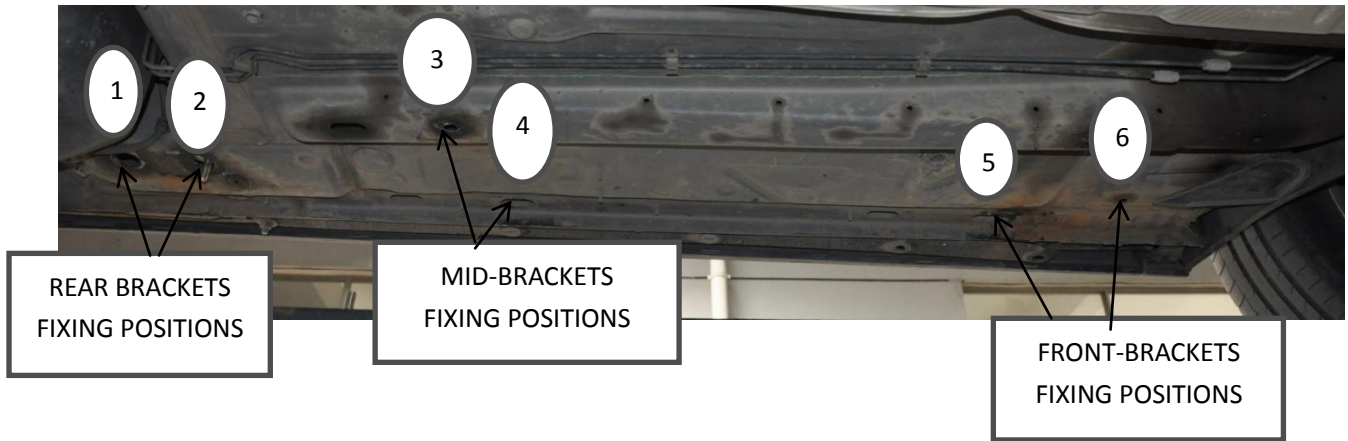


2. FRONT BRACKET INSTALLATION STEPS

- A. Take off the rubber covers on fixing position on your car bottom.
- B. Put No.2 bracket into positions 1 and 2; No.3 bracket into positions 3 and 6; No.1 bracket into positions 4 and 5; put front bracket on fixing position 5 and 6(above the no.3 and no.1 bracket), use 2XM10 nuts, 2XM10 Spring joint-packings, 2XM10 Outsize flap joint-packings to fix the front bracket, check illustration below.

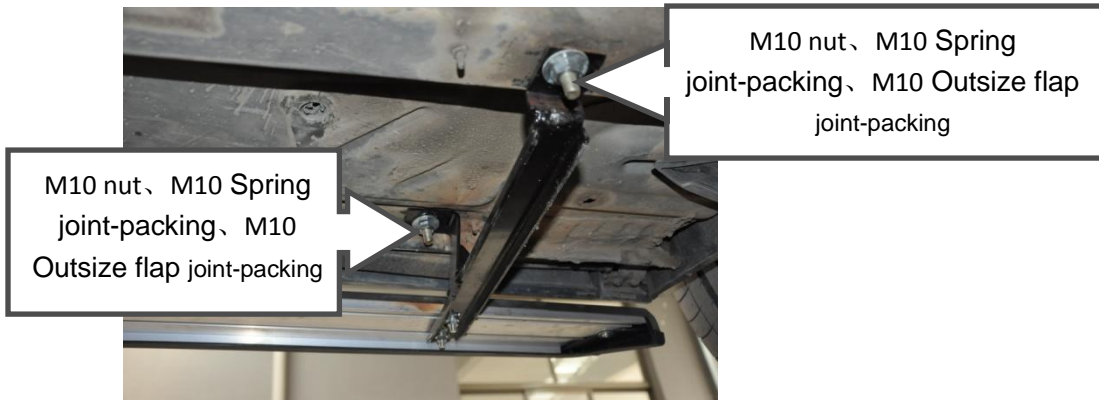


3. MID-BRACKET INSTALLATION

Put mid bracket on fixing position 3 and 4(above the no.3 and no.1 bracket), use 2XM10 nuts, 2XM10 Spring joint-packings, 2XM10 Outsize flap joint-packings to fix the front bracket, check illustration below.

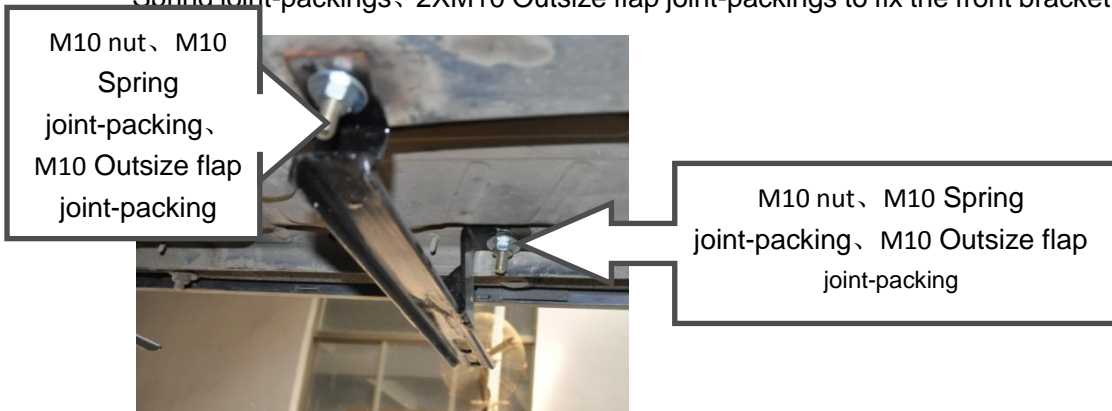


4. REAR BRACKET INSTALLATION

Put rear bracket on fixing position 1 and 2(above the no.2 bracket), use 2XM10 nuts, 2XM10 Spring

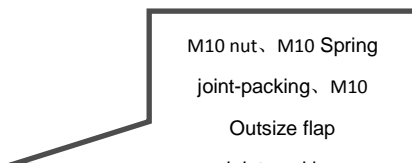

joint-packings、 2XM10 Outsize flap joint-packings to fix the front bracket, check illustration below.

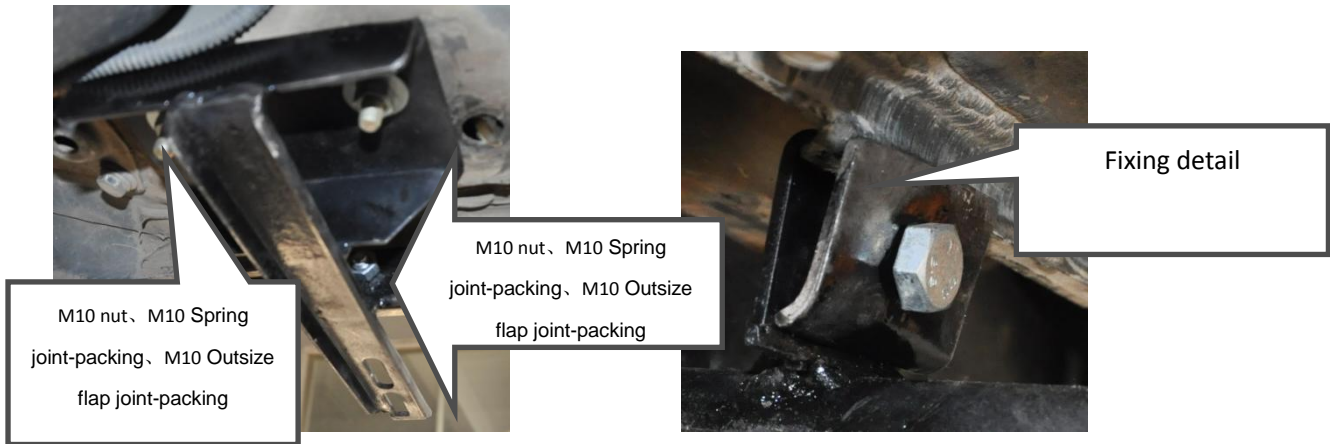


5. BOARDS INSTALLATION

- A. Open the car doors.
- B. Take off all the M8 nuts, Spring joint-packings, Outsize flap joint-packings on the boards.



- C. Use 2XM8 nuts、 2XM8 Spring joint-packings、 2XM8 Outsize flap joint-packings to connect the brackets to boards, check photo below.

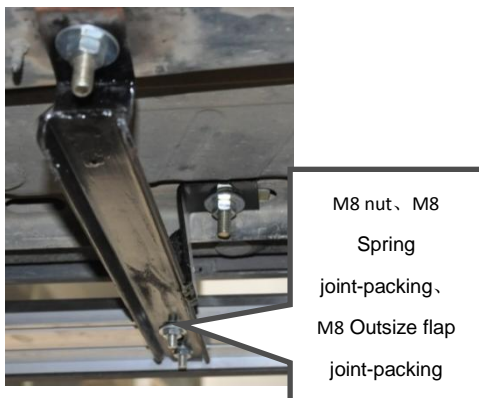

- D. Adjust the boards to be perfect fitment. Install back the skid plate which be taken off before installation.