

## Running Boards Side Steps suitable for Mercedes GLS SUV X167 (2020-2023)

Code RBMBGLSX167WOL

---

To facilitate your installation, please read the product instruction manual carefully before installation.


**Step 1:** Remove the original side skirts of the car (please keep the nuts and buckles to fix the new boards).



**Step 2:** Install our inner brackets on the car and tighten it with the existed screws



**Step 3:** Fix the existed side trim on the bracke

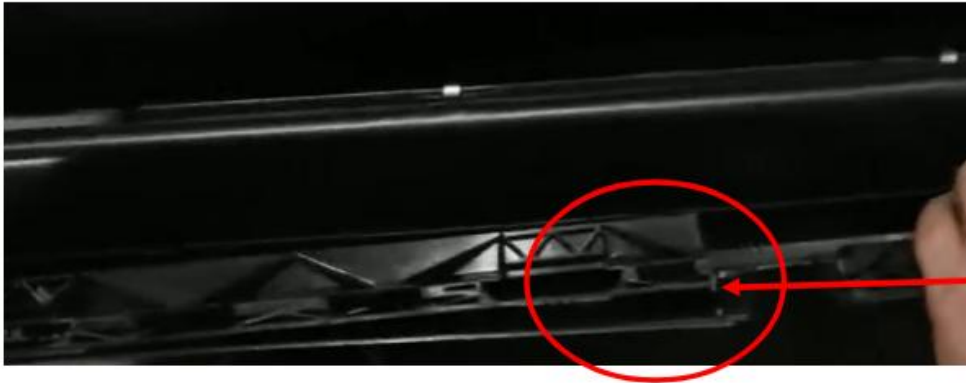

Position to install the side trim, make sure press it firmly into place

**Step 4:** Check whether all screws are tightened and pack the tools.

**Step 5:** Install the board on car and fix it with the original plastic cover(which you took off on step 1)



**Step 6:** Repeat on the other side

Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.